

## 80–230 Removal and installation of vacuum element of tank filler neck flap

### A. Sedan and coupe


#### Color code of vacuum lines for central interlock

Vacuum line	color code
Interlocking line (25)	yellow-red

#### Removal

1 Loosen oval head screws (30) for vacuum element and disconnect vacuum element.


2 Pull vacuum element together with control rod out of sleeve.

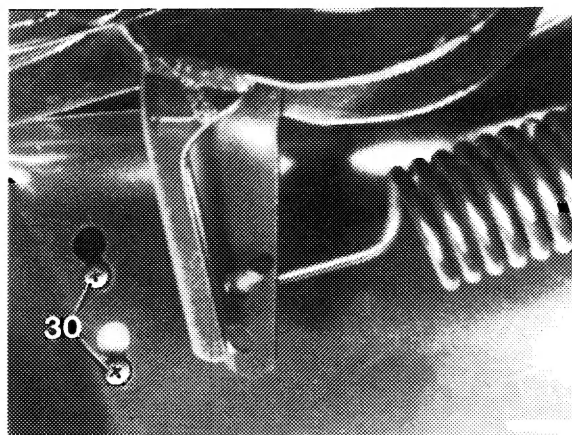

3 Pull connection (17) with interlocking line (25) from vacuum element (4).

4 Pull compression spring (18) from control rod.

5 Unscrew oval head screws (30).

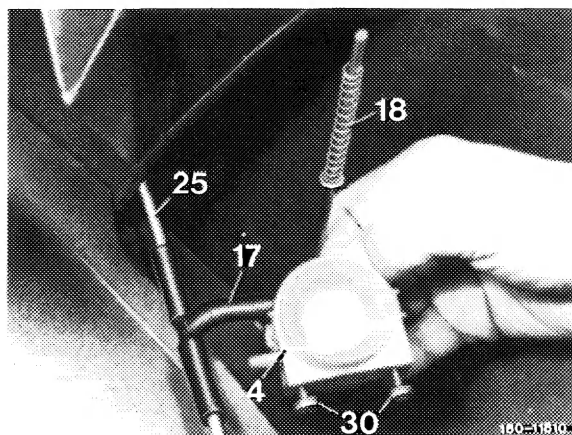

#### Installation

6 For installation proceed vice versa, while screwing oval head screws into vacuum element by half prior to installation.


## B. T-sedan

### Color code of vacuum lines for central interlock


Vacuum line	color code
Interlocking line (25)	yellow-red

### Removal

- 1 Open paneling of trunk space at the right.

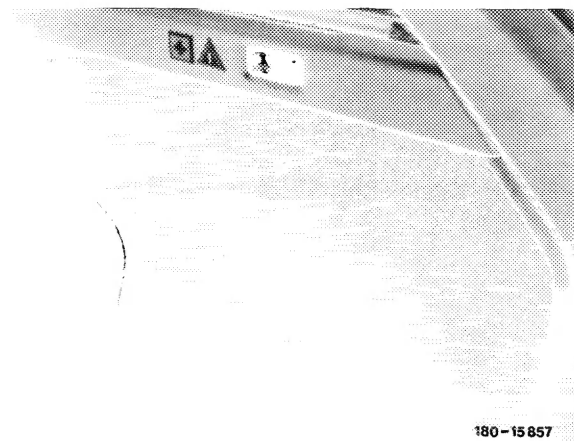

- 2 Pull connection (17) with interlocking line (25) from vacuum element (4).

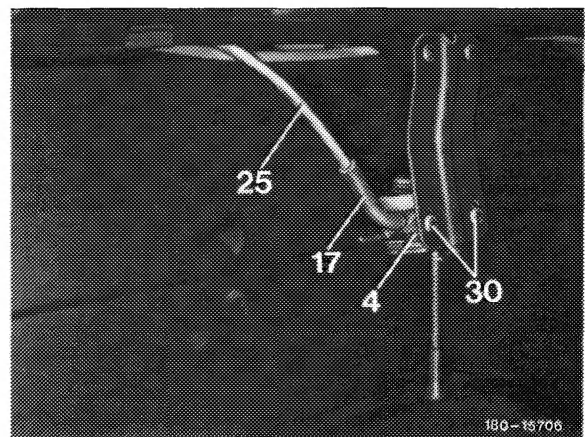

- 3 Unscrew oval head screws (30) for vacuum element.

- 4 Pull vacuum element (4) with control rod out of sleeve (19).

- 5 Pull compression spring (18) from control rod.

### Installation

- 6 For installation proceed vice versa.

